



Инструкция по настройке ADSL модема D-Link DSL-2640U

1. Откройте на компьютере веб браузер, например Internet Explorer.
2. В строке адреса наберите 192.168.1.1

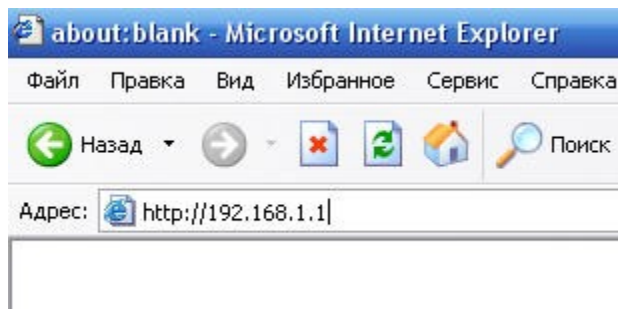

3. Появится предложение ввести пароль для входа в меню модема. Введите имя пользователя **admin**, пароль **admin**.

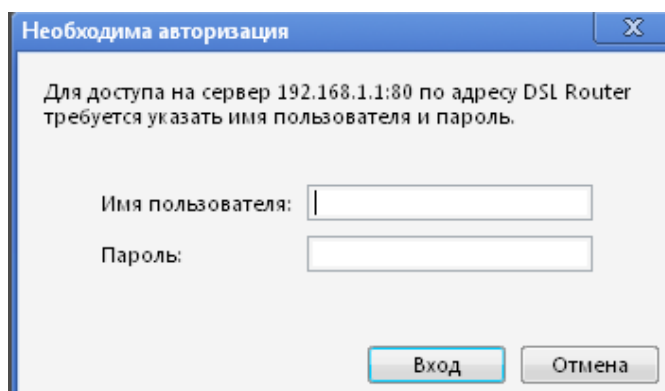

(продолжение на следующей странице)

4. После этого вы увидите основную страницу веб-конфигуратора модема.

The screenshot shows the D-Link web configuration interface. On the left is a navigation menu with options: Device Info, Quick Setup, Advanced Setup, Wireless, Diagnostics, and Management. The main content area is titled "Device Info" and contains a table with the following data:

BoardID:	DSL-2640U
Software Version:	RU_2.01
Bootloader (CFE) Version:	1.0.37-12.1
Release Date:	Sun Nov 8 12:34:29 CST 2009
Wireless Driver Version:	4.174.64.19.cpe1.0sd

Below the table, a note states: "This information reflects the current status of your DSL connectio". Underneath is another table with the following data:

Line Rate - Upstream (Kbps):	
Line Rate - Downstream (Kbps):	
LAN IPv4 Address:	192.168.1.1
MAC Address:	1c-bd-b9-7b-38-c9
Default Gateway:	
Primary DNS Server:	192.168.1.1
Secondary DNS Server:	192.168.1.1

5. Для настройки интернета введите перейдите в раздел Advanced Setup-WAN

The screenshot shows the D-Link web configuration interface for WAN Setup. The navigation menu on the left includes: Device Info, Quick Setup, Advanced Setup, WAN, LAN, Quality of Service, Routing, DSL, Port Mapping, Diagnostics, and Management. The main content area is titled "Wide Area Network (WAN) Setup" and contains the following text:

Choose Add, Edit, or Remove to configure WAN interfaces.
Choose Save/Reboot to apply the changes and reboot the system.

Port/Vpi/Vci	Con. ID	Category	Service	Interface	Protocol	Igmp	QoS	State	Remove	Edit
--------------	---------	----------	---------	-----------	----------	------	-----	-------	--------	------

Below the table are three buttons: Add, Remove, and Save/Reboot.

Далее нажмите кнопку Add и выставите параметры следуя слайдам:

(продолжение на следующей странице)

D-Link

Device Info
Quick Setup
Advanced Setup
WAN
LAN
Quality of Service
Routing
DSL
Port Mapping
Diagnostics
Management

ATM PVC Configuration

This screen allows you to configure an ATM PVC identifier (PORT and VPI and VCI) and select a service category.

PORT: [0-3]

VPI: [0-255]

VCI: [32-65535]

Service Category:

Enable Quality Of Service

Enabling packet level QoS for a PVC improves performance for selected classes of applications. QoS cannot be enabled for all PVCs. The maximum number of PVCs will be reduced. Use **Advanced Setup/Quality of Service** to assign priorities for the applications.

Enable Quality Of Service

Кнопка Next

D-Link

Device Info
Quick Setup
Advanced Setup
WAN
LAN
Quality of Service
Routing
DSL
Port Mapping
Diagnostics
Management

Connection Type

Select the type of network protocol for IP over Ethernet as WAN interface

PPP over ATM (PPPoA)

PPP over Ethernet (PPPoE)

MAC Encapsulation Routing (MER)

IP over ATM (IPoA)

Bridging

Encapsulation Mode

Кнопка Next

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection.

PPP Username:

PPP Password:

Ваши логин и пароль
указанные в договоре

PPPoE Service Name:

Authentication Method:

Obtain default gateway automatically

Use the following default gateway:

Use IP Address:

Use WAN Interface:

PPP IP extension

Advanced DMZ

Non DMZ IP Address:

Non DMZ Net Mask:

Keep alive PPP connection

Dial on demand (with idle timeout timer)

Use Static IP Address

Bridge PPPoE Frames Between WAN and Local Ports

PPP Link Setting

MTU

Кнопка Next

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (

Enable NAT

Enable Firewall

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast

Enable WAN Service

Service Name

Кнопка Next

(продолжение на следующей странице)

- Device Info
- Quick Setup
- Advanced Setup
 - WAN**
 - LAN
 - Quality of Service
 - Routing
 - DSL
 - Port Mapping
- Diagnostics
- Management

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

PORT / VPI / VCI:	0 / 0 / 40
Connection Type:	PPPoE
Service Name:	pppoe_0_0_40_1
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled
MTU:	1492

Click "Save" to save these settings. Click "Back" to make any modifications.

NOTE: You need to reboot to activate this WAN interface and further configure :

Кнопка Save

Для настройки беспроводной сети нажмите кнопку Wireless – Security

Wireless -- Security

This page allows you to configure security features of the wireless LAN interface. You may setup configuration manually

Manual Setup AP

You can set the network authentication method, selecting data encryption, specify whether a network key is required to authenticate to this wireless network. Click "Save/Apply" when done.

Select SSID:

Network Authentication:

WPA Pre-Shared Key: [Click here to display](#)

WPA Group Rekey Interval:

WPA Encryption:

WEP Encryption:

В этом меню выберите «Network Authentication» и установите пароль «WPA Pre-Shared Key». После нажмите кнопку Save. Далее перейдите в Advanced Setup

Wide Area Network (WAN) Setup

Choose Add, Edit, or Remove to configure WAN interfaces. Choose Save/Reboot to apply the changes and reboot the system.

Port/Vpi/Vci	Con. ID	Category	Service	Interface	Protocol	Icmp	QoS	State	Remove	Edit
0/0/40	1	UBR	pppoe_0_0_40_1	ppp_0_0_40_1	PPPoE	Disabled	Disabled	Enabled	<input type="checkbox"/>	<input type="button" value="Edit"/>

Кнопка Save/Reboot.

Дождаться перезагрузки модема и приятного использования интернета от компании Элитком.