



## Инструкция по настройке ADSL модема TP-Link TD-8817

1. Откройте на компьютере веб браузер, например Internet Explorer.
2. В строке адреса наберите 192.168.1.1

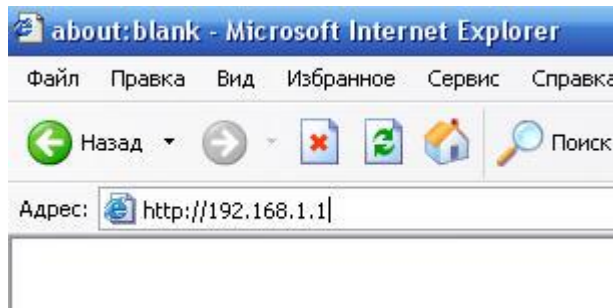

3. Появится предложение ввести пароль для входа в меню модема. Введите имя пользователя admin, пароль admin.

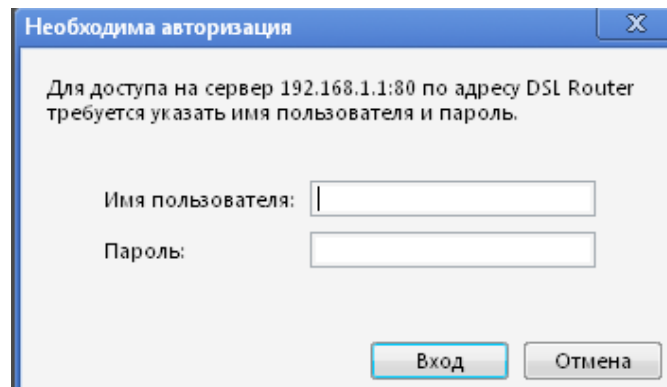

4. После этого вы увидите основную страницу веб-конфигуратора модема.

<b>Status</b>	<b>Quick Start</b>	<b>Interface Setup</b>	<b>Advanced Setup</b>	<b>Access Management</b>	<b>Maintenance</b>	<b>Status</b>	<b>Help</b>
	Device Info	System Log	Statistics				

**Device Information**

Firmware Version : 4.0.0 Build 090508 Rel.23295  
 MAC Address : 94:0c:6d:a4:14:52

**LAN**

IP Address : 192.168.1.1  
 Subnet Mask : 255.255.255.0  
 DHCP Server : Enabled

**WAN**

Virtual Circuit :    
 Status : Connected  
 Connection Type : Bridge  
 IP Address : N/A  
 Subnet Mask : N/A  
 Default Gateway : N/A  
 DNS Server : N/A

**ADSL**

ADSL Firmware Version : FwVer:3.11.2.167\_TC3086 HwVer:T14.F7\_5.0  
 Line State : Showtime  
 Modulation : G.DMT  
 Annex Mode : ANNEX\_A

	Downstream	Upstream	
SNR Margin :	19.0	8.0	db
Line Attenuation :	1.5	7.5	db
Data Rate :	8128	928	kbps

5. Для настройки интернета перейдите в раздел Interface Setup – Internet. Далее выставьте параметры соответственно приведенной таблице

**TP-LINK®** TD-8817 ADSL2/2+ Ethernet/USB Router

**Interface** | Quick Start | **Interface Setup** | Advanced Setup | Access Management | Maintenance | Status | Help

Internet | LAN

---

**ATM VC**

Virtual Circuit : PVC0

Status :  Activated  Deactivated

VPI : 0 (range: 0~255)

VCI : 40 (range: 1~65535)

---

**QoS**

ATM QoS : UBR

PCR : 0 cells/second

SCR : 0 cells/second

MBS : 0 cells

---

**Encapsulation**

ISP :  Dynamic IP Address  
 Static IP Address  
 PPPoA/PPPoE  
 Bridge Mode

---

**PPPoE/PPPoA**

Servicename :

Username : Логин

Password : \*\*\*\*\*

Encapsulation : PPPoE LLC

Bridge Interface :  Activated  Deactivated

Ваши логин и пароль выданные при заключении договора

(продолжение на следующей странице)

**Connection Setting**

Connection :  Always On (Recommended)  
 Connect On-Demand (Close if idle for  minutes)  
 Connect Manually

TCP MSS Option : TCP MSS(0:default)  bytes

---

**IP Address**

Get IP Address :  Static  Dynamic

Static IP Address :

IP Subnet Mask :

Gateway :

NAT :

Default Route :  Yes  No

TCP MTU Option : TCP MTU(0:default)  bytes

Dynamic Route :  Direction :

Multicast :

MAC Spoofing :  Enabled  Disabled

Далее нажмите кнопку Save.

Приятного использования интернета от компании Элитком.